


# 1/4" Formed Wall Mount Brackets

## Style B Filler


Use filler to prevent overtightening of matching handrail bracket which may result in cracking the drywall. Also used with Style B brackets (page 6).

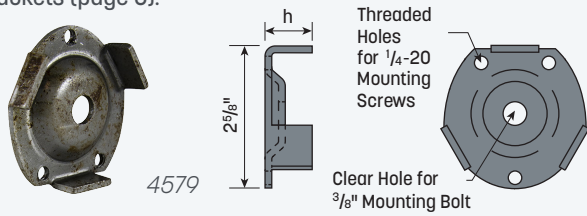

h	Screws	Steel
5/8"	3	4579
5/8"	None	3530B


1/4-20 x 1/2" round head screws

## Universal Saddle, 3 1/4" Centerline, One, Two or Three Hole

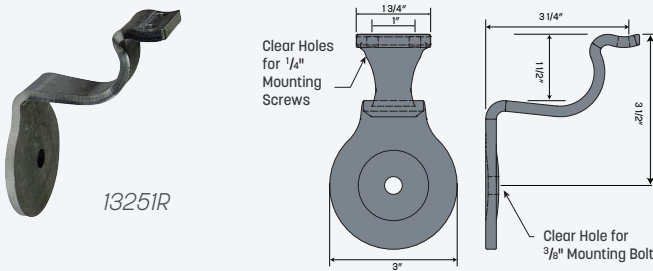


Material/Hole Count	Part Number
Steel, One Hole	13251R
Steel, Two Holes	13252R
Steel, Three Holes	13253R
Zinc Plated Steel, One Hole	13251R.PL
Aluminum, One Hole	23251R
Aluminum, Two Holes	23252R
Aluminum, Three Holes	23253R
304 Satin Stainless, One Hole	33251R
304 Satin Stainless, Two Holes	33252R
304 Satin Stainless, Three Holes	33253R

## Round Saddle, 3" Centerline, One, Two or Three Hole

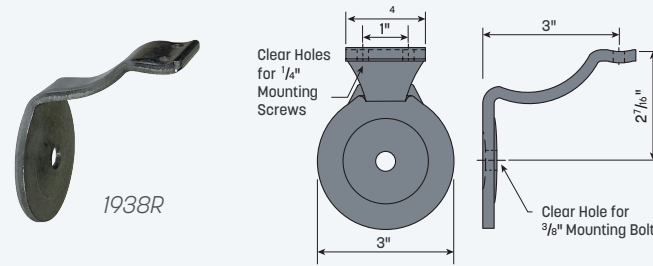

Material/Hole Count	Part Number
Steel, One Hole	1938R
Steel, Two Holes	1940R
Steel, Three Holes	1944R
Aluminum, One Hole	1939R
Aluminum, Two Holes	1941R
Aluminum, Three Holes	1945R
304 Satin Stainless, One Hole	1959R*
304 Satin Stainless, Two Holes	1959R-2*
304 Satin Stainless, Three Holes	1959R-3*
316 Satin Stainless, One Hole	1959R.316*

## Flat Saddle, 3" Centerline, One Hole

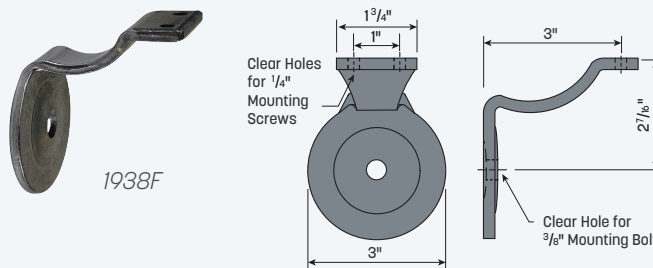

Material/Hole Count	Part Number
Steel, One Hole	1938F*
Aluminum, One Hole	1939F*
304 Satin Stainless, One Hole	1959F*

\* 3/16" thick stainless steel

Learn more or order at  
WagnerCompanies.com

