




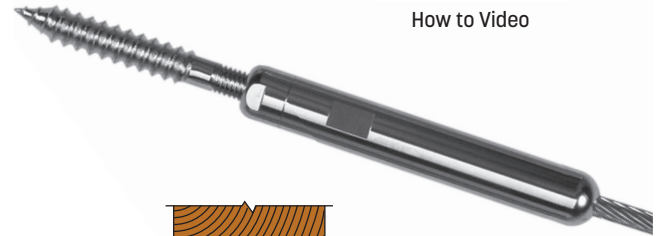

How to Video

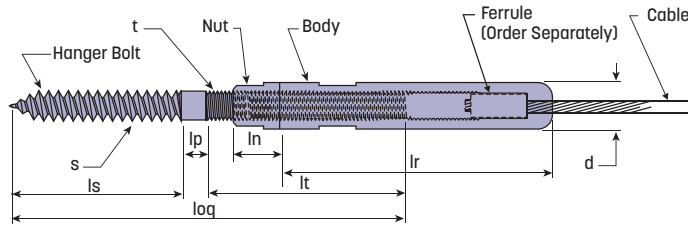

Adjust-A-Body with Hanger Bolt Tensioner

This tensioner screws right into your wooden end post. There is no need for special mounting hardware.

Cable Size	s	t	ls	lp*	ln	lt	loq	lr	d	Also Order Ferrule #	STAINLESS
1/8"										CRF4	CRAJB6
3/16"	5/16"	5/16-24 LH	1.50"	.250"	.375"	2.00"	3.75"	2.75"	.500"	CRF6	CRAJB6
1/4"	7/16"	7/16-20 LH	2.00"	.250"	.500"	2.50"	4.75"	3.00"	.625"	CRF8	CRAJB8

Note: Order Ferrule separately (page 144)



Adjust-A-Body with Extended Length Hanger Bolt Tensioner

Same as the above tensioner, except the hanger bolt is 3" long, allowing you to penetrate deeper into the post or wall if necessary. Offered for use with 1/8" and 3/16" cable.



Cable Size	s	t	ls	lp*	ln	lt	loq	lr	d	Also Order Ferrule #	STAINLESS
1/8"										CRF4	CRAJB6L
3/16"	5/16"	5/16-24 LH	1.50"	1.75"	.375"	2.00"	5.25"	2.75"	.500"	CRF6	CRAJB6L

Note: Order Ferrule separately (page 144)

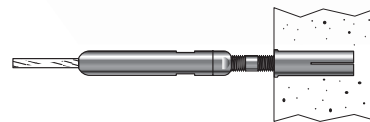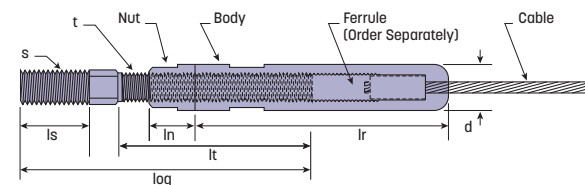

Adjust-A-Body with Concrete Anchor Bolt Tensioner

Here is an easy, practical way to attach your tensioner to a concrete wall. The end screws into a commonly available concrete anchor (not included). Order the concrete anchor separately from your local building supply outlet.

Cable Size	s	t	ls	ln	lt	loq	lr	d	Red Head® Anchor Steel	Red Head® Anchor Stainless	Also Order Ferrule #	STAINLESS
1/8"									RL-38	SSRM-38*	CRF4	CRAJAB6
3/16"	3/8-16	5/16-24 LH	.500"	.375"	2.313"	3.188"	2.75"	.500"	RL-38	SSRM-38*	CRF6	CRAJAB6
1/4"	1/2-13	7/16-20 LH	1.125"	.500"	2.50"	3.938"	3.00"	.625"	RL-12	SSRM-12*	CRF8	CRAJAB8

* Drill 1/2" hole for SSRM-38 and 5/8" hole for SSRM-12.

Note: Order Anchors and Ferrule separately (page 144)

STANDARD PRODUCTS

RAILING SYSTEMS

TRADITIONAL RAILING

CUSTOM SERVICES

APPENDIX